



外形安装尺寸
Mounting Dimension Sheets-overview

RX37


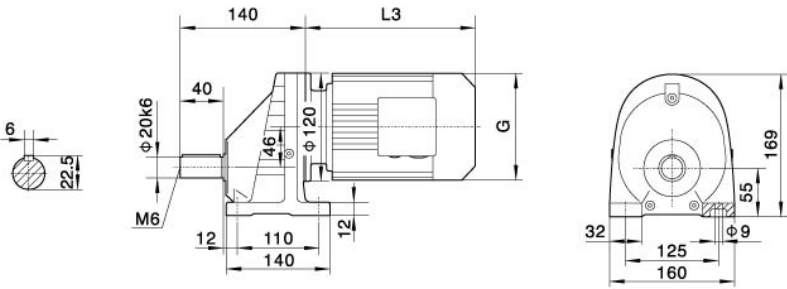


RX..S37

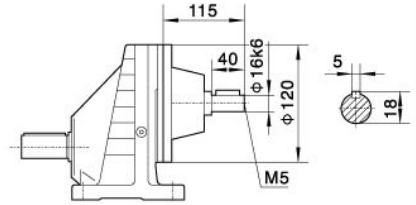

电机需方配时或配特殊电机时需加联接法兰
When equipping the user's motor or the special one, the flange is required to be connected.

RXF37

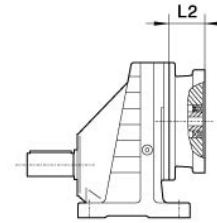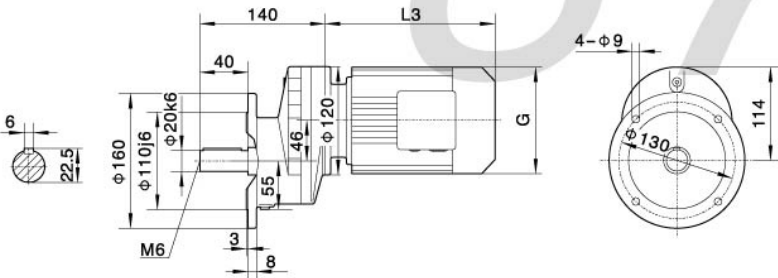

注：其余尺寸见相应的结构形式
Note: For other values please refer to the opposite structure

Y ₂ 电机机座号 Motor size	63	71		80		90S
功率/4P Power/(kW)	0.18	0.25	0.37	0.55	0.75	1.1
L3	223	236		264		301
G	130	145		175		195
L2	71	71		71		71

注：“RX..”表示RX、RXF
Note：“RX..”mean RX、RXF

R